




AMERICAN CAR CRAFT INSTRUCTIONS

C5 Corvette Rear Deck Trim 3pc w/Caps and screws coop only

PART #031027

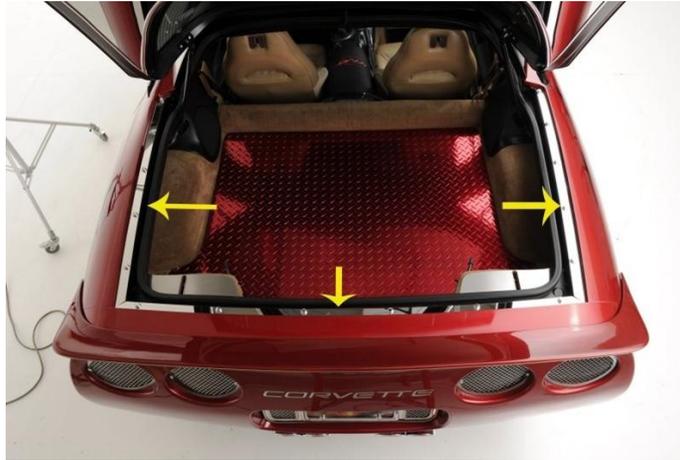

PARTS INCLUDED:

3-Stainless Trim Sections

16-Chrome Cap Covers

16-Replacement Washer Head Screws

Liner Information: Your new accessories will come to you with a protective surface liner. Leave this liner in place until the installation is complete to prevent finger prints and or possible scratches during installation.

1. Remove all the factory screws and then set the appropriate trim sections into position
2. Install all the replacement screws provided and snug them down. Do not over tighten as this will distort the trim. Remove the protective liner
3. Using some household 100% pure clear silicone apply a small dab into each of the chrome caps provided and then place them atop each screw head and allow to set overnight. Be careful not to apply too much silicone as this will cause an undesirable mess. Just a small dab sufficient enough make contact will do fine.

American Car Craft LLC
18924 Sakera Rd Hudson, FL. 34667
Ph 727.861.1500 Fax 727.861.1520
www.americancarcraft.com