



Rear Deck Trim 3pc w/Caps & Screws


Convertible/Z06 only

1998-2004



AMERICAN CAR CRAFT INSTRUCTIONS

C5 Corvette Rear Deck Trim 3pc w/Caps & Screws Convertible or FRC Only Part# 031045

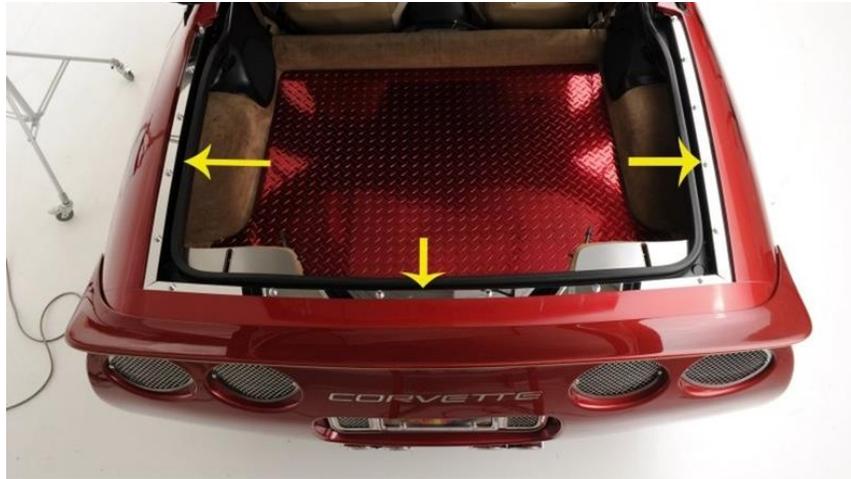

Coupe Shown

PARTS INCLUDED:

3-Stainless Trim Sections

12-Chrome Cap Covers

12-#8 3/4" Black Washer Head Screws

Liner Information: Your new accessories will come to you with a protective surface liner. Leave this liner in place until the installation is complete to prevent finger prints and or possible scratches during installation.

1. Remove all the factory screws and then set the appropriate trim sections into position
2. Install all the replacement screws provided and snug them down. Do not over tighten as this will distort the trim. Remove the protective liner
3. Using some household 100% pure clear silicone apply a small dam into each of the chrome caps provided and then place them atop each screw head and allow to set overnight. Be careful not to apply too much silicone as this will cause an undesirable mess. Just a small dab sufficient enough make contact will do fine.

Thank you and enjoy your purchase!

**If any questions occur during installation please contact
AMERICAN CAR CRAFT**

18924 SAKERA ROAD-HUDSON FLORIDA 34667

Phone # 727-861-1500

Fax # 727-861-1520

www.americancarcraft.com