




AMERICAN CAR CRAFT INSTRUCTIONS

C5 REPLACEMENT PERFORATED FUEL RAIL COVERS

Part #033047

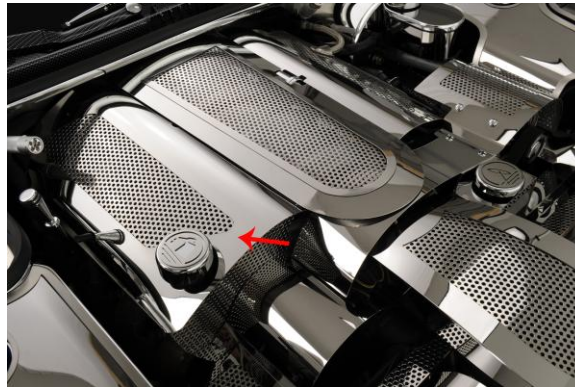

Parts Included

- 2x Fuel Rail Covers
- 2x Velcro Brackets
- 1x Steel Fuel Line Cap

Introduction: These new covers are a unique and easy to install design that will allow more ventilation for your higher power, hotter running performance engines. The new covers offer beautiful restyling to your engine bay and are made of the finest stainless material available, truly a high end custom accessory.

Liner Information: Your new accessories will come to you with a protective surface liner. Leave this liner in place until the installation is complete to prevent finger prints and or possible scratches during installation.

1. Remove your factory fuel rail covers by simply pulling them off the engine. Both covers simply snap in place.
2. Detach the fuel line, please note you will need a simple fuel line removal tool available at any auto part store.
3. You have been supplied with two fuel rail brackets that contain Velcro Attachment Tape. These two brackets come to you flat but are designed so that you can manually form them so that you will be able to set them over your factory fuel rail and then down to the rail mounting bolts. Once you have shaped them accordingly remove the two factory bolts for each fuel rail then place the bracket over the hole locations. Then reinstall the bolts securing the bracket so that the Velcro set over the rail itself. Once they are bolted in place tweak the shape so that they sit nice and flat over the top of the two rails.
4. Your new covers come to you preformed however it may be necessary to further tweak the shape so that you will be able to take them on and off perfectly also so that you will be able to set them nice and flat to the fuel rail bracket you just installed. The new covers are designed to make use of the two lower factory perches of the stock cover. Simply align the new cover with these two perches and then roll the cover over to the Velcro

bracket. Once you have achieved a nice fitting shape peel the Velcro half to expose the adhesive and then install the new cover pressing along the Velcro area. Remove the cover so that you can directly and firmly press the Velcro half to the cover to achieve a nice bond. Then rest the cover and remove the protective liner. Install the fuel line by simply pushing it over the receiver until it clicks on then pull it gently to make sure it is attached. When it ever becomes time to remove the fuel rail you can detach the cover enough to expose the fuel line then use the removal tool to release the line.

If you have any questions please call American Car Craft.

American Car Craft LLC
18924 Sakera Rd Hudson, FL. 34667
Ph 727.861.1500 Fax 727.861.1520
www.americancarcraft.com