




AMERICAN CAR CRAFT INSTRUCTION

C5 CORVETTE PERFORATED BELT TENSION COVER

PART# 033056 patent pending

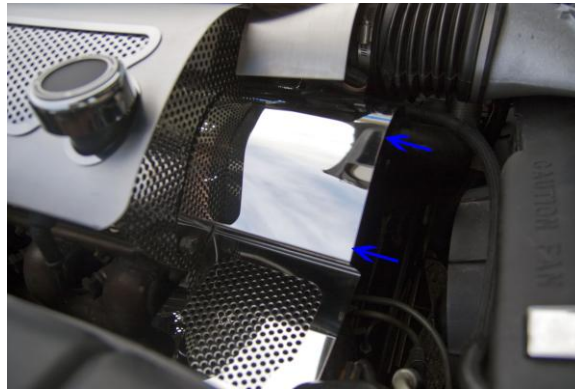

ITEMS NEEDED:
Clear Household Silicone

PARTS INCLUDED:
3/8 3/4 standard thread
121 n/c

1. You will notice a small tab sticking up at one end of your new cover. Insert this tab behind the engine throttle body and just under the sensor connector.
2. Next locate the bolt hole just by the large tab at the opposite side of the cover. Line this up and screw in with the bolt (provided) just slightly. At this time check and see that you have adequate clearance between the belt tension cover and the belt tension pulley. You should have about a finger size space between them. If the cover is too close to the pulley remove and adjust shape by gently curving the cover until you have provided the accurate amount of space between the two. Once this is achieved replace bolts and tighten.
3. Cover the bolt with the chrome cap provided. (You can use a small dab of clear household silicone in the cap to insure that it stays in place).

**If any questions occur during installation please contact American Car Craft at
727-861-1500.**

Thank you and enjoy your new purchase.

Note: Care must be taken when cleaning your cover. It is a good idea to lightly dust your cover with a clean soft cloth first in order to prevent any particles from scratching it. Then wipe (using a new clean soft cloth) with a good quality streak free glass cleaner.

**If any questions occur during installation, please contact American Car
Craft at 727 861-1500.**

**American Car Craft LLC
18924 Sakera Rd Hudson, FL. 34667
Ph 727.861.1500 Fax 727.861.1520
www.americancarcraft.com**