




AMERICAN CAR CRAFT INSTRUCTION

**C5 Perforated Stock Air Tube Cover**

**PART#033067**

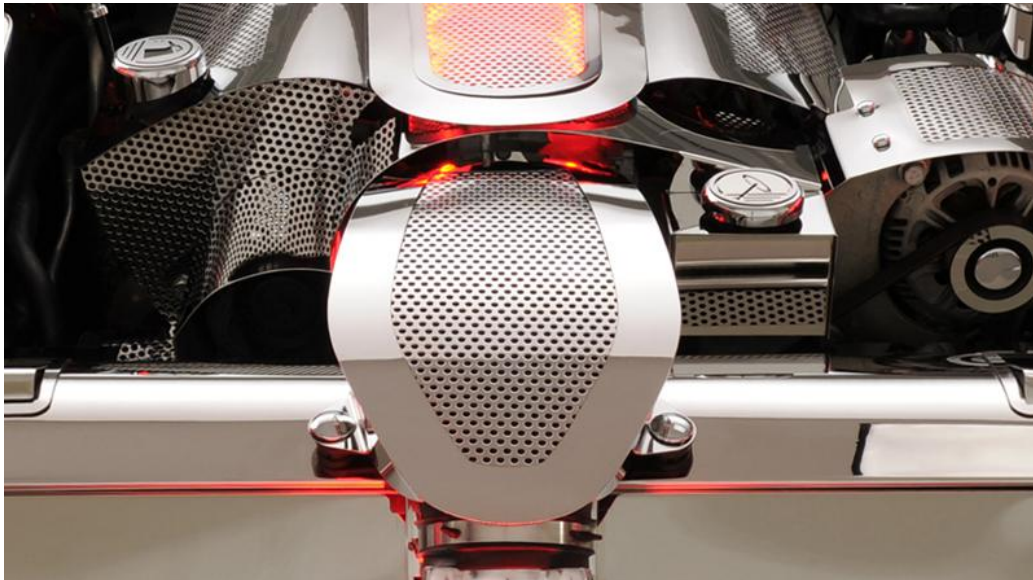

**THIS COVER IS DESIGNED TO FIT THE STOCK FACTORY AIR TUBE.**

**PARTS INCLUDED:**

- 2- 1-5/8 Stainless washer head screws**
- 2- 1" Chrome Caps Covers with Putty**
- 1-Stainless Factory Air Tube Cover**

Your new stainless air tube cover comes to you with a clear protective liner. Do not remove until step 3.

1. Position your new cover over the factory air tube and make note of its position. It may be necessary to mold slightly my hand in order to achieve a nice proper looking fit. Once you are satisfied with the fit and position mark the two holes directly to the air tube with a silver marker or scratch awl.

2. Remove cover and poke a hole directly into the air tube with a scratch awl at the two points that you have just marked. NOTE: Poking a hole as apposed to drilling a hole will

not create any shavings that might fall into the mass flow sensor. The factory tube is made of ABS plastic and will allow you to poke the hole.

3. Reposition the air tube cover and screw it into position with the two stainless oval head screws (provided). Once the cover is secured remove the protective liner.

**Note: Care must be taken when cleaning your cover. It is a good idea to lightly dust your cover with a clean soft cloth first in order to prevent any particles from scratching it. Then wipe (using a new clean soft cloth) with a good quality streak free glass cleaner.**

**If any questions occur during installation, please contact American Car Craft at  
727-861-1500.**

**Thank you and enjoy your new purchase.**

**AMERICAN CAR CRAFT  
18924 SAKERA ROAD-HUDSON FLORIDA 34667  
Phone # 727-861-1500 Fax # 727-861-1520  
[www.americancarcraft.com](http://www.americancarcraft.com)**