




AMERICAN CAR CRAFT INSTRUCTIONS

2008-2013 C6 CORVETTE PERFORATED WIPER COWL INSERT PART #043058

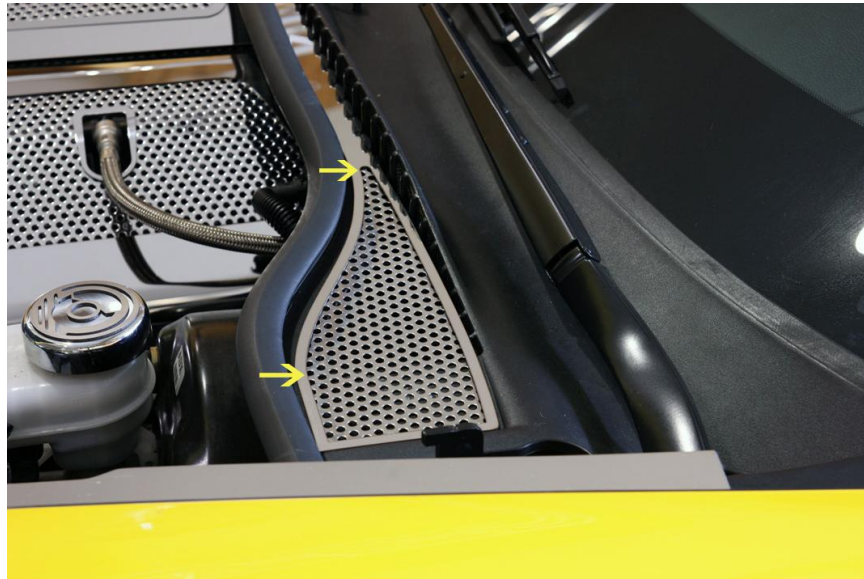

PARTS INCLUDED:

- 1-2pc Stainless Wiper Cowl
- 1-Adhesive Promoter Pack
- 1-Adhesive Promoter Tube
- 1-Length of 1/4" Chrome Molding 60"

Your new cover comes to you with a protective liner. Remove liner as instructed below.

1. Remove the factory hood gasket from the wiper cowl by simply pulling forward and off. Then thoroughly scrub clean the cowl area just behind the gasket ridge. Once this is complete swipe the entire area with the adhesive promoter provided.
2. Before you permanently attach any thing place the two long strips of stainless into position to get acquainted with the fit and to see for yourself just how you will go about setting each of them in place. The two pieces should butt tight to each other with no gap. Once you are satisfied with the fit remove the red release liner from the back of the parts and then carefully set them back into position and press firmly along its length to set the parts to the factory plastic. Once this is done remove the protective liner.

3. You have been supplied with an adhesive promoter snaps stick. Squeeze this small tube until the vile inside breaks releasing the fluid onto the fiber end and then apply a single bead along the front edge of the two pieces closest to the engine. You have been provided with a long length of chrome trim. Cut one end of the trim to match the angle at either end of the stainless inserts and then peel a small length of the red release liner from the back of the trim and set the end you just cut. Pull the red liner as you set the trim along the entire length of the stainless until you reach the corner. Trim the end of the trim to match the shape of the end point. Reinstall the factory rubber hood gasket.

**If you have any questions during installation please call American Car Craft at
727-861-1500.**

Thank you and enjoy your new purchase!

**AMERICAN CAR CRAFT
18924 SAKERA RD HUDSON FL 34667
Phone: 727 861-1500 Fax: 727 861-1520
www.americancarcraft.com**