




AMERICAN CAR CRAFT INSTRUCTIONS

2005-2013 C6 CORVETTE PERFORATED FUSE BOX COVER

PART#043062 patent pending

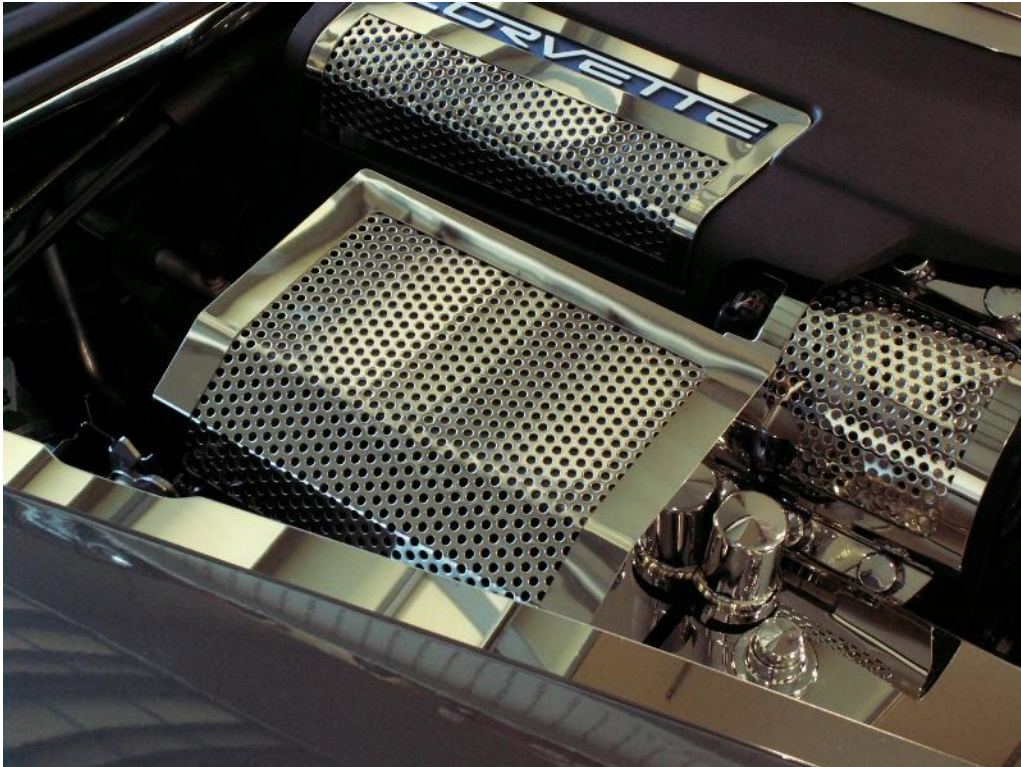

PARTS INCLUDED:

- 1-Stainless Perforated Fuse Box Cover
- 1-Adhesive Promoter Pack
- 4-Velcro Attachment Cookies

Your new cover comes to you with a protective liner. Remove liner after installation is complete.

This great looking all stainless fuse box cover has been designed especially for the C-6. It requires no tools to install or to gain access to your fuses. Just follow a few simple steps to change your plain black fuse box into a cool looking custom electrical center.

1. Thoroughly clean the top of the factory fuse box with alcohol to remove any and all road grime and dirt. Then swipe the area with the adhesive promoter provided.
2. You have been supplied with four Velcro attachment cookies. Simply peel the release liner from both sides of the cookies and place them at the four corners of the top of the factory fuse box cover. Then simply slide the new cover over the factory fuse box and press firmly over the Velcro cookies areas then remove protective liner.

Note: Care must be taken when cleaning your cover. It is a good idea to lightly dust your cover with a clean soft cloth first in order to prevent any particles from scratching it. Then wipe (using a new clean soft cloth) with a good quality streak free glass cleaner. SEE ENCLOSED CARE SHEET!

**If any questions or problems occur during installation, please contact
American Car Craft at 727-861-1500.**

Thank You and Enjoy Your Purchase!

**AMERICAN CAR CRAFT
18924 SAKERA RD HUDSON FL 34667
Phone: 727 861-1500 Fax: 727 861-1520
www.americancarcraft.com**