




AMERICAN CAR CRAFT INSTRUCTIONS

C6 CORVETTE POWER STEERING RESERVOIR COVER POLISHED w/CAP

PART #043085

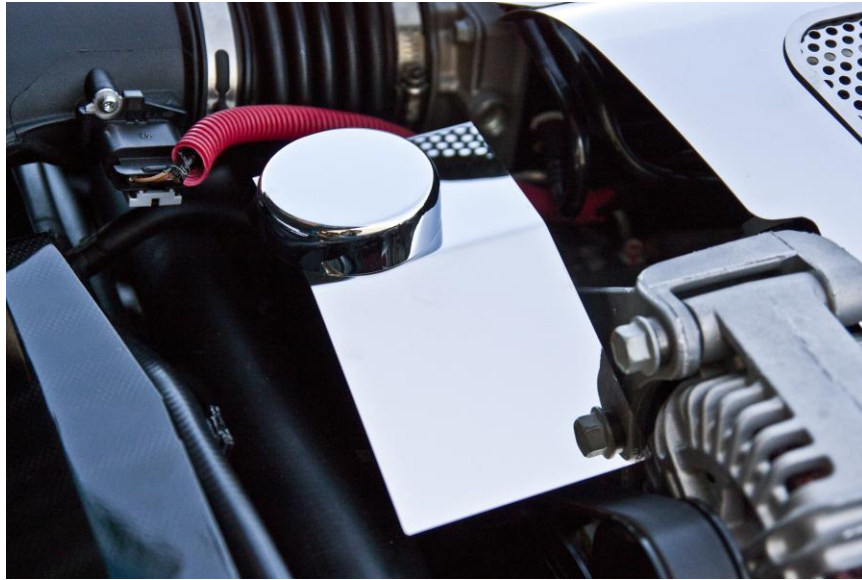

Parts Included:

Stainless Power Steering Cover
Chrome Cap Cover w/Velcro
1-Adhesive Promoter Pack

Liner Information: Your new accessories will come to you with a protective surface liner. Leave this liner in place until the installation is complete to prevent finger prints and or possible scratches during installation.

1. The ACC cover has been designed to apply to all C6 corvettes with the exception of the High Performance ZR1. In order to enjoy the best look for this cover it is recommended to relocate the aluminum power steering supply line that is obtrusively routed in front of the reservoir. Although it is not absolutely necessary to relocate this supply line for this installation it is recommended, it is a very easy thing to do and will allow you to enjoy a nice clean look.
2. You will notice that the supply line has an aluminum section connected to two rubber ends. This aluminum section can be relocated under the radiator hoses positioned directly in front of the line. With an applied effort force the line down and under the radiator hose continuing further to also include the smaller hoses so that you will be able to allow the line to take an almost natural position under these hoses hiding it from view. It extremely important that you examine this routing to insure that is correctly in place. **IMPORTANT PLEASE NOTE:** A correctly relocated line will be safely and securely positioned away from the engine pulley. Be sure to inspect this reposition to eliminate any possibility of the supply line coming in contact with the pulley as this will cause a rupture in the line that will cause you to replace the line.

3. Now that you have successfully repositioned the supply line simply remove the factory fluid cap and place the new cover in position. Reinstall the factory cap to lock the new cover in place.
4. Scrub the top of the factory cap with alcohol to remove any dirt or grime. Then swipe to cap top with the adhesive promoter provided. Once this is done remove the Velcro cookie half from under the decorative cap cover provided and then remove the release liner from the half and press it onto the factory cap.
5. Finally remove the protective liner from the new cover and then place the decorative cover over the factory fluid cap to finish the installation.

If any questions or problems occur during installation, please contact American Car Craft at 727-861-1500.

Thank You and Enjoy Your Purchase!

AMERICAN CAR CRAFT
18924 SAKERA RD HUDSON FL 34667
Phone: 727 861-1500 Fax: 727 861-1520
www.americancarcraft.com