




AMERICAN CAR CRAFT INSTRUCTIONS

C6 CORVETTE 2PC POLISHED AIR CAPACITOR COVER

PART #043111

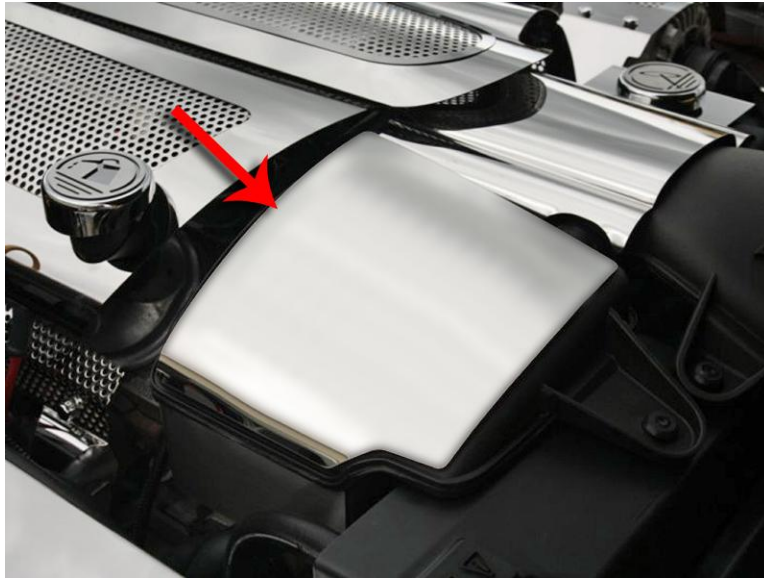

Parts Included:

- 1 x Adhesive Promoter Pack
- 2 x Stainless Covers

Introduction: This new and unique cover has been designed to install over the factory air capacitor cover box top as well as the lower side view of the canister.

Liner Information: Your new accessories will come to you with a protective surface liner. Leave this liner in place until the installation is complete to prevent finger prints and or possible scratches during installation.

1. Thoroughly scrub clean the entire top area as well as the visible side areas of the factory air box with alcohol to remove any and all contaminants such as vinyl dressing, road grime and dirt. Test that you have achieved a nice clean surface by applying a small length of masking tape to see how well it sticks. If the stick is weak, repeat the cleaning process until it is strong. This is especially **important** because the new cover is relatively heavy and the air box will have a tendency to expand and contract with the heat of the engine bay, so a good clean bond is crucial to the long term installation.
2. Once you have achieved a nice tack apply the adhesive promoter supplied with your kit. This chemical packet is **not** a cleaner but an adhesive accelerator and **must** be used in order to achieve a good long term bond.
3. Before you permanently attach your new cover place set into position to check the fit. Although your cover comes to you pre-shaped it is **absolutely imperative** that the shape be contoured further by hand until it **matches the shape of the air box perfectly**. This is **critical** for a successful long term bond of this accessory. If

this step is skipped or not performed thoroughly is will be very probable that the cover will pop up somewhere compromising the entire installation.

4. Now that you have achieved a nice contoured shape you can now install the part by removing the red release liner from the back of the cover and then carefully set it in place pressing very firmly along the edges to set the bond. It is important to allow the cover to set overnight to allow the bonding of the attachment tape to cure before being subject to heat expansion. This will allow a good long term bond. The lower section installs in much the same way however because of the placement, setting it just right can be a little tricky so go slowly so that you can set it perfectly the first time. The attachment tape is very aggressive and will not allow you to reposition it without damaging it. Remove the protective liners to finish the installation.

If any questions occur during installation, please contact American Car Craft at 727-861-1500.

Thank you and enjoy your new purchase!

**American Car Craft LLC
18924 Sakera Rd Hudson, FL. 34667
Ph 727.861.1500 Fax 727.861.1520
www.americancarcraft.com**