



Doorsills Polished 2pc


1988-1996



## AMERICAN CAR CRAFT INSTRUCTION

### C4 Corvette Doorsills

Part# 021001

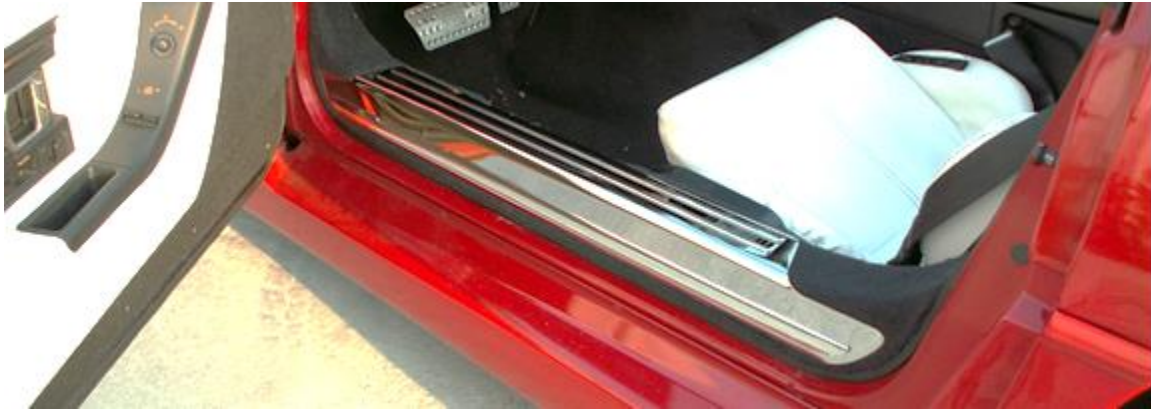

#### **PARTS INCLUDED:**

- 2- Stainless Doorsills
- 6-1" # 8 Stainless Flat Head
- 1-9/64<sup>th</sup> Drill Bit
- 2-33" of 3/4" Molding Strips
- 10-3/4" Oval Head Replacement Screws

Your new doorsills come to you with a protective liner that you will remove at the end of step 2. This will help produce a nice clean install. Your new doorsills are designed to fasten over the two carpet screw areas.

1. Remove the two factory screws. **Note:** These will not be reused. Place your new sill in position over the two holes. Using two of the three screws (provided) for each side, fasten securely. Be sure NOT to OVERTIGHTEN as this will distort the metal. **Note:** It is important that the flat head screws seat flush in the sills.
2. Drill the remaining hole with a 9/64<sup>th</sup> drill bit and install the final screw. Remove the protective liner.
3. You have been provided with two molding strips, use one of them and place it over the screws to finish this part of the installation. DO NOT CLOSE YOUR DOOR.
4. In order to create adequate clearance for your new sills it will be necessary to remove the five screws holding your lower carpet to your door panel. You have been provided with 5 replacement screws that will sit deeper into the door panel grommets thus creating adequate clearance.
5. Repeat steps one thru four for the opposite sill.

**Thank you and enjoy your purchase!**

**If any questions occur during installation, please contact**

**AMERICAN CAR CRAFT**

**18924 SAKERA ROAD-HUDSON FLORIDA 34667**

**Phone # 727-861-1500**

**Fax # 727-861-1520**

**[www.americancarcraft.com](http://www.americancarcraft.com)**