



Emblem Trim Rings Polished 2pc

1984-1990



AMERICAN CAR CRAFT INSTRUCTIONS

C4 Corvette 2pc Emblem Trim Ring Part #022005



PARTS INCLUDED:

2-Stainless Emblem Bezels
1-Tube of Adhesive Promoter

1. Clean the area around each emblem with household rubbing alcohol to remove any wax and dirt then swipe the area once with the adhesive promoter tube provided.
2. Place each bezel into position to familiarize yourself with each placement before removing the liner. It WILL BE necessary to HAND FORM the bezels to CONFORM to the shape of the car doing this will prevent any possibility of the bezel popping loose or lifting long term.
3. Once they are fitted properly peel the release liner from the back of each bezel and carefully set them nice and evenly around each emblem. Press firmly to set.

Thank you and enjoy your purchase!

If any questions occur during installation, please contact

AMERICAN CAR CRAFT

18924 SAKERA ROAD-HUDSON FLORIDA 34667

Phone # 727-861-1500

Fax # 727-861-1520

www.americancarcraft.com




AMERICAN CAR CRAFT INSTRUCTIONS

How to Use Your 3M Adhesive Promoter Tube

1. Hold the tube with you thumb and forefinger as shown.



2. Apply pressure with your thumb until you hear a “pop” sound.

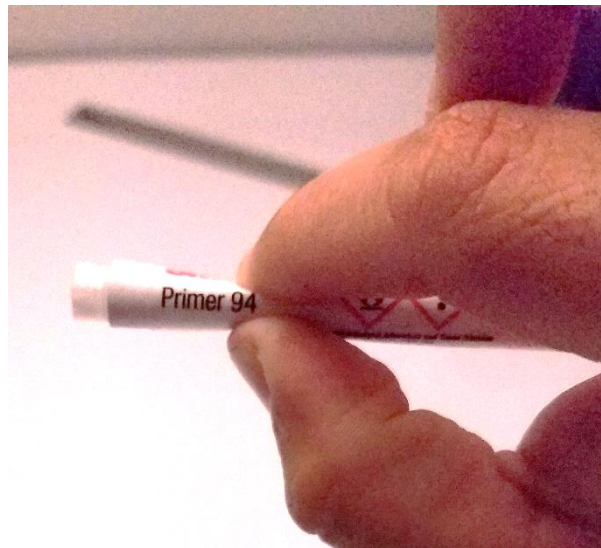

3. Shake the tube back and forth a couple times to get the promoter to flow through the felt tip.
4. Apply to product mounting surface as instructed in the product instructions.

If you need further instruction, below is a link to a video on our YouTube channel.

Type it into your browser exactly as it is below.

<https://youtu.be/vhXVOhBrfN8>