




AMERICAN CAR CRAFT INSTRUCTIONS

C5 POLISHED LOW PROFILE PLENUM COVER

PART# 033029

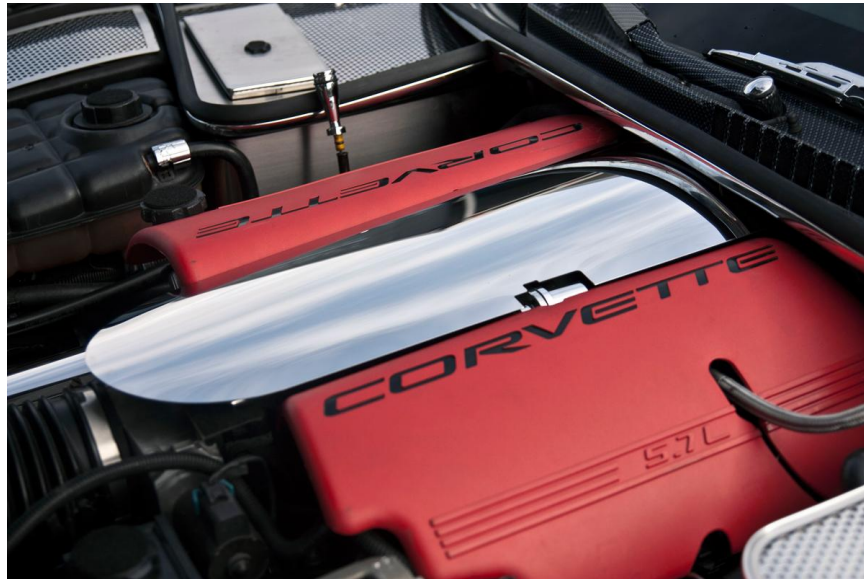

PARTS INCLUDED:

- 1x Low Profile Plenum Cover
- 2x Strips of Velcro Attachment Tape
- 1x Pack of Adhesive Promoter
- 1x 2pc Decorative Chrome Valve Covers
- 1x Test Kit

Introduction:

Liner Information: Your new accessories will come to you with a protective surface liner. Leave this liner in place until the installation is complete to prevent finger prints and or possible scratches during installation.

1. **Surface Preparation:** Your new cover is designed to attach to your existing stock fuel rail covers via Velcro tape. **PLEASE NOTE:** If silicone treatments have previously been applied to your fuel rail covers please refer to the special preparation instructions attached. If silicone treatments have not been applied then continue by first removing all road dirt and grime with soap and water. Then scrub your fuel rail covers along the entire most inner corner with household isopropyl alcohol. (This is where your new plenum cover will sit). Let dry then wipe same area with the adhesive promoter (provided).
2. You have been provided with two decorative plastic chrome vacuumed valve covers specifically designed to cover the large vacuumed valve just to the driver side of the factory plenum. Dab a small amount of common household 100% silicone (clear) to the valve, set the half cut cover onto

the valve and then install the round bezel over the remaining end to completely cover the valve. This will nicely trim the valve in chrome, see picture #4.

TECH TIP: Before placing the end bezel apply a small dab of instant adhesive to the two chrome halves to bond them to each other this will help keep them in place long term. Allow some time for the adhesives to set.

Your new cover has 2 Velcro strips of attachment tape on its underside. Remove the one side from both strips and set aside for a moment. Place your new cover on top of the factory fuel rail covers and line up so that it appears nice and straight and tucked under the back gasket ridge.

The next step is to place a length of masking tape on either side of the new plenum cover directly onto both factory fuel rail covers. By doing this will indicate where the new cover will sit.

Next apply the Velcro hook strips along the inside edge about 1/4 inch inside of the tape edge you just placed and press firmly to set. Remove the masking tape.

Now you can install the new cover by simply pressing into position. It may be necessary to slightly lift and nudge the new cover in order to achieve a nice straight fit.

INSTALLATION TIP: Although this procedure should not be necessary with a clean and proper installation you may apply 2 or 3 rivets thru the Velcro into your factory fuel rails on both sides to insure that the Velcro stays in place.

Note: Care must be taken when cleaning your cover. It is a good idea to lightly dust your cover with a clean soft cloth first in order to prevent any particles from scratching it. Then wipe (using a new clean micro fiber cloth) with a good quality streak free foamy glass cleaner.

If any questions occur during installation, please contact American Car Craft at 727 861-1500.

Thank you and enjoy your new purchase.

**American Car Craft LLC
18924 Sakera Rd Hudson, FL. 34667
Ph 727.861.1500 Fax 727.861.1520
www.americancarcraft.com**