




AMERICAN CAR CRAFT INSTRUCTION

C5 POWER STEERING THROTTLE BODY COVER

PART#033046_{patent pending}

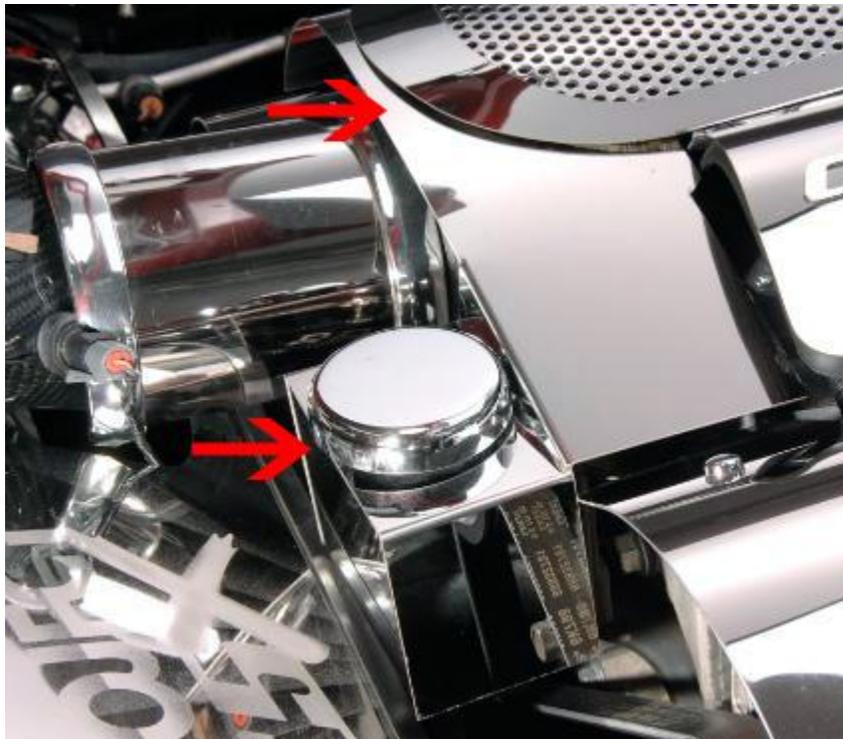

PARTS INCLUDED:

- 1-Stainless Throttle Body Cover
- 1-Chrome Decorative Cap Cover w/Velcro attachment cookies
- 1-Adhesive Promoter Packet
- 1-Velcro Attachment Bracket

1. Remove the power steering cap.
2. Loosen the 10-mm bolt directly atop the throttle body.

- 3. Place the Velcro attachment bracket over the loosened bolt so that the tab faces the rear of the engine and tighten down. Place your new cover over the power steering reservoir and take a look at the overall fit make any adjustments by hand if needed. Replace power steering cap.**

- 4. You have been supplied with a chrome decorative power steering cap cover. In order to install this cover simply scrub the top of the factory cap with household rubbing alcohol to remove all dirt and grime. Then swipe the top of the cap once with the adhesive promoter snap tube provided. Remove the Velcro attachment cookie from the underside of the chrome cap peel the release liner from the cookie and firmly press into place on top of the prepared factory cap. Then simply set the chrome cap cover in place.**

Note: Care must be taken when cleaning your cover. It is a good idea to lightly dust your cover with a clean soft cloth first in order to prevent any particles from scratching it. Then wipe (using a new clean soft cloth) with a good quality streak free glass cleaner.

**If any questions occur during installation, please contact American Car Craft at
727-861-1500.**

**AMERICAN CAR CRAFT
18924 SAKERA RD HUDSON FL 34667
Phone: 727 861-1500 Fax: 727 861-1520
www.americancarcraft.com**