



LS3 Air Tube Cover Polished 2pc


Z06 2006-2013 C6/GS 2008-2013



AMERICAN CAR CRAFT INSTRUCTIONS

All Z06 & 2008-2013 Corvette Stock Air Tube Cover

Part #043040 Patent Pending

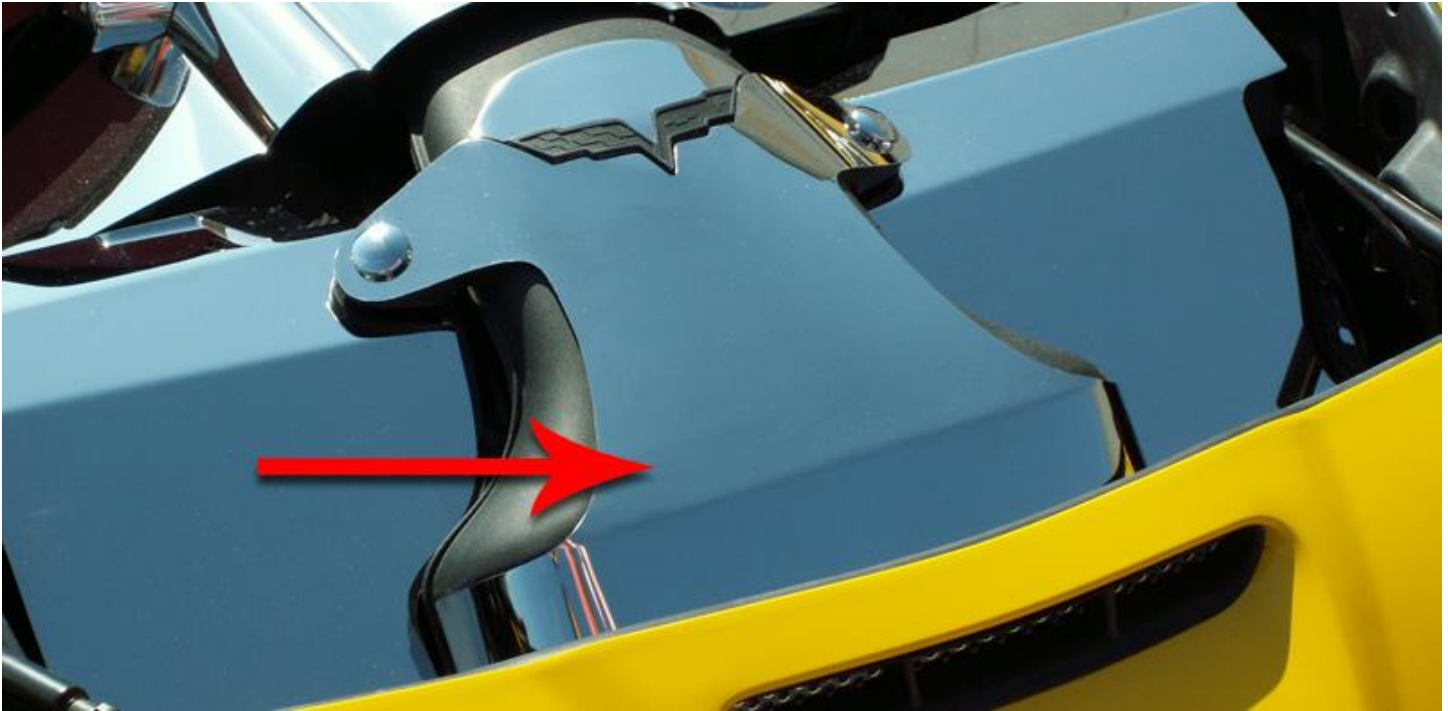

PARTS INCLUDED:

- 1-2pc Stainless Air Tube Cover
- 1-Pack of Adhesive Promoter
- 2-1" #8 Oval Head Screws
- 2-1½" #12 Washer Head Screws
- 2-White Sockets Large
- 2-Large Chrome Cap Covers
- 2-1" Chrome Cap Covers w/Butyl Putty

Do not remove liner until prompted by the instructions.

1. Your new two-piece cover comes to you pre-shaped however it will be necessary to further shape and form each piece by hand in order to achieve a nice snug contoured fit.
2. Thoroughly clean the entire air tube with household isopropyl alcohol to remove any dirt and grime. Then swipe the area once above the factory emblem with the adhesive promoter provided.
3. Remove the top of the air tube stud retainer ONLY, NOT THE ENTIRE STUD. This will expose a small hole at the top of each stud.
4. Peel the red release liner from the back of the smaller cover and carefully place it onto the factory air tube above the factory emblem. Press firmly at all points to set.

5. You will notice a small hole on each side of the larger cover towards the front of the car. Fasten the new cover to the air tube using the two oval head screws provided thru the two white sockets. Be careful not to over tighten! Remove the protective liner and snap on the two large chrome cap covers. Repeat this screw assembly for the top two holes and fasten to the stud hole exposed earlier. Set the two large 1” chrome caps onto the washer head screws, these will have butyl attachment putty and work very well.
6. Remove protective liner from small section installed in step 3.

Thank you and enjoy your purchase!

**If any questions occur during installation, please contact
AMERICAN CAR CRAFT
18924 SAKERA ROAD-HUDSON FLORIDA 34667
Phone # 727-861-1500 Fax # 727-861-1520
www.americancarcraft.com**