



Doorsills Carbon Fiber Glass w/Stainless Trim
Illuminated Factory Overlay LED

2014-2016



AMERICAN CAR CRAFT INSTRUCTIONS

C7 Corvette Stingray Door Sill Overlays Illuminated Part #051019



PARTS INCLUDED:

- 2-Doorsill
- 2-Tubes of Adhesive Promoter

Liner info: Your new accessories will come to you with a protective surface liner. Leave this liner in place until the installation is complete to prevent fingerprints and or possible scratches during installation. This liner is required to remain on the part until you are instructed to remove it.

Installation Instructions Are Available Online:

<http://youtu.be/x9D6r4qm-qg>

Thank you and enjoy your purchase!

If any questions occur during installation, please contact

AMERICAN CAR CRAFT

18924 SAKERA ROAD-HUDSON FLORIDA 34667

Phone # 727-861-1500 Fax # 727-861-1520

www.americancarcraft.com




AMERICAN CAR CRAFT INSTRUCTIONS

How to Use Your 3M Adhesive Promoter Tube

1. Hold the tube with your thumb and forefinger as shown.



2. Apply pressure with your thumb until you hear a “pop” sound.

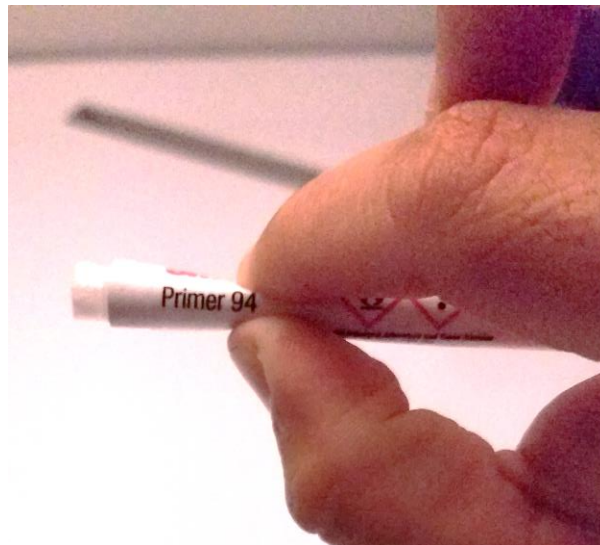

3. Shake the tube back and forth a couple times to get the promoter to flow through the felt tip.
4. Apply to product mounting surface as instructed in the product instructions.

**If you need further instruction, below is a link to a video on our YouTube channel.
Type it into your browser exactly as it is below.**

<https://youtu.be/vhXVOhBrfN8>