




AMERICAN CAR CRAFT INSTRUCTIONS

2014-2018 C7/Z06 Corvette – Door Jam Chrome

Button Kit | 6pc

SKU #051023

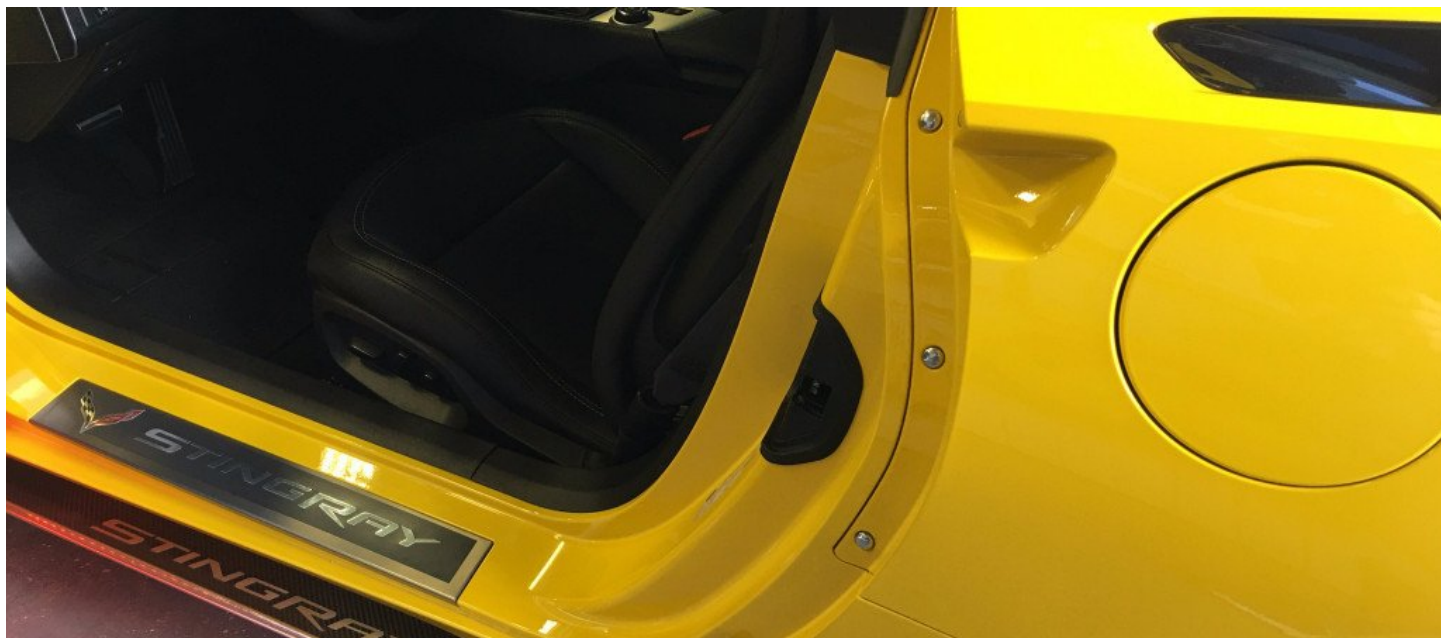

Parts Included: 6-Chrome Buttons

1. To install, simply push each button into the 3-indentations on each door jam.
2. If you have any problems with installation, please call us at 727-861-1500 for assistance.



Thank you and enjoy your purchase!

If any questions occur during installation, please contact

AMERICAN CAR CRAFT

18924 SAKERA ROAD-HUDSON FLORIDA 34667

Phone # 727-861-1500

Fax # 727-861-1520

www.americancarcraft.com