


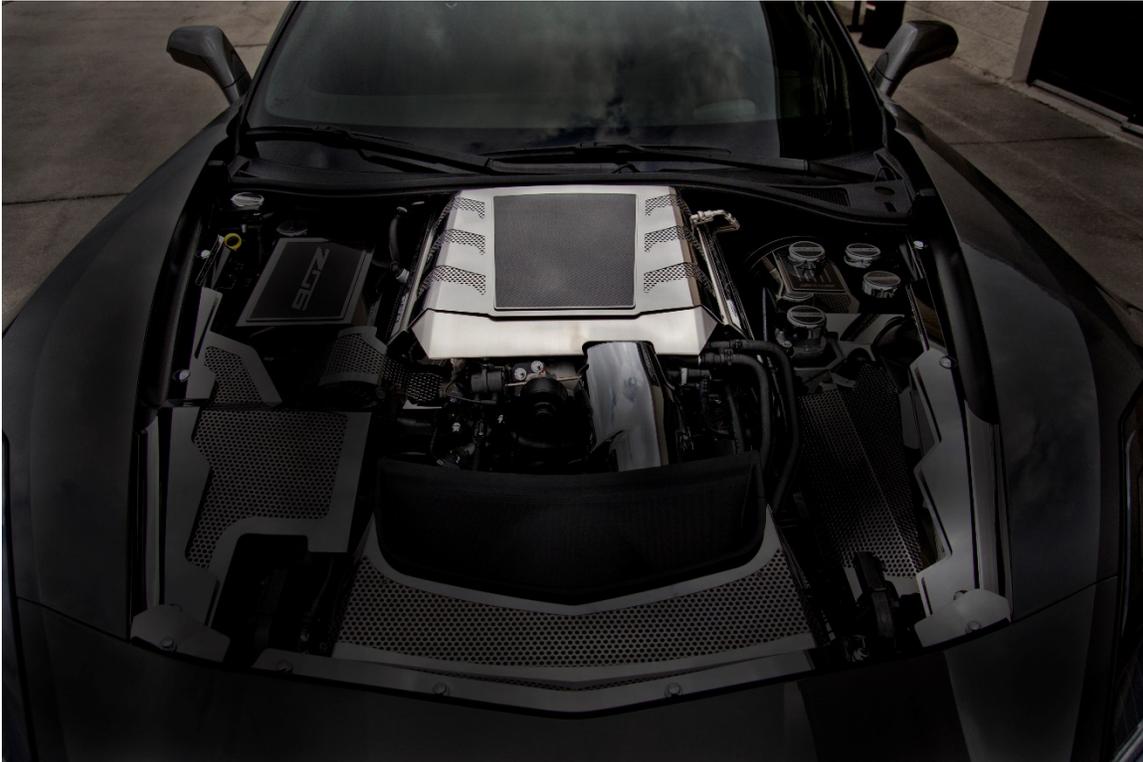

AMERICAN CAR CRAFT INSTRUCTIONS

2015 Corvette Stingray – Z06 Supercharger/Engine Shroud Cover

PART#053080 patent pending



PARTS INCLUDED:

- 1 1 ¼-20 x3/4 elevator bolt
- 2 1 2"x4" Velcro attachment tape
- 3 1 adhesive promoter pouch

Your new cover comes to you with a protective liner. Remove liner after installation is complete.

The 2015 Z06 plenum cover has been designed to stand by itself and also will match up with the ACC fuel rail covers and throttle body cover.

- 1 The first step will be to thoroughly clean the top back section of the supercharger casing closest to the wind shield. Scrub this with rubbing alcohol to remove any and all road grim and dirt. Then swipe this area once with the adhesive promoter packet supplied.
- 2 The next step will be to peel and stick one side of the Velcro attachment tape to this area and press firmly to set. Then set the remaining half of the Velcro directly to the underside of the plenum cover at the approximate area of the supercharger. This will serve to attach the new plenum and keep the new cover from moving around.
- 3 You have been supplied with a single washer head style bolt. Screw this bolt into the threaded hole in front of the super charger. Finger the bolt down so it sits up a little less than an eighth of an inch. This will serve as a front anchor for the new cover.
- 4 Now that you have prepared for the new cover you can install it. Maneuver the covers u shaped tab over the washer head bolt and slide it unto the bolt at the same time maneuvering the cover under the wiper cowl. You will notice the new cover has two notches on the back edge to except the cowl ridge. Then simply press down at the Velcro area to set the covers position. Then remove the protective liner to Finnish the installation.

Note: Care must be taken when cleaning your cover. It is a good idea to lightly dust your cover with a clean soft cloth first in order to prevent any particles from scratching it. Then wipe (using a new clean soft cloth) with a good quality streak free glass cleaner. SEE ENCLOSED CARE SHEET!

If any questions or problems occur during installation, please contact American Car Craft at 727-861-1500.

Thank You and Enjoy Your Purchase!

AMERICAN CAR CRAFT

18924 SAKERA RD HUDSON FL 34667

Phone: 727 861-1500

Fax: 727 861-1520

www.americancarcraft.com