




AMERICAN CAR CRAFT INSTRUCTIONS

BRUSHED FACTORY ENGINE SHROUD 23PC KIT PART#103005

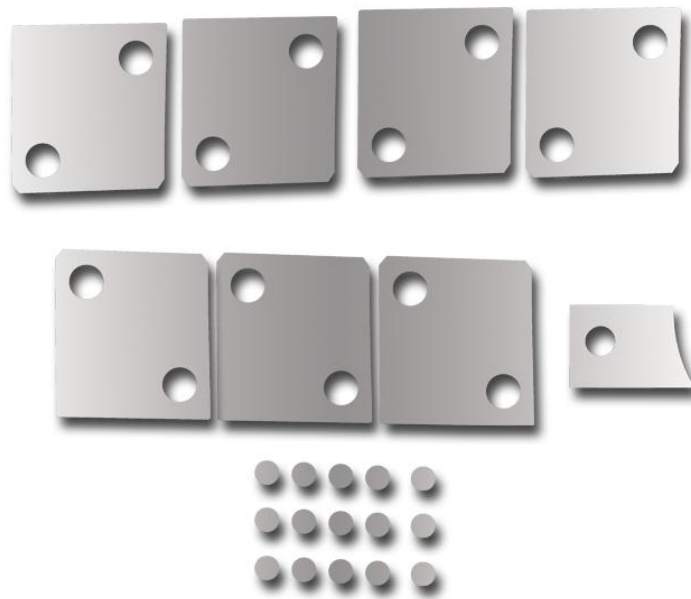

PARTS INCLUDED:

- 23-Stainless Trim Pieces
- 1-Adhesive Promoter Pack
- 1-Adhesive Promoter Tube

This new kit has been designed to fit to the sides of the factory Camaro SS full engine shrouds simulated coil packs.

1. Thoroughly scrub the sides of the factory shroud and be sure to clean all the recessed diagonal recast holes with household rubbing alcohol.
2. Swipe the entire areas to be mounted with the adhesive promoter provided.
3. Peel the release liner and set all the small circles into their recesses.

4. Gently shape each of the square covers so that they contour nicely to the shape of the factory cover.
5. Once you have achieved a nice contour simply peel the release liner from the back of each square piece and carefully line them up with the factory shroud and press them firmly in place at all eight locations.
- 6.



**If you have any questions during installation please call American Car Craft
at 727 861-1500.**

Thank you and enjoy your purchase!

**AMERICAN CAR CRAFT
18924 SAKERA RD HUDSON FL 34667
Phone: 727 861-1500 Fax: 727 861-1520
www.americancarcraft.com**