




AMERICAN CAR CRAFT INSTRUCTIONS

Camaro Power Steering Cover

PART #103040

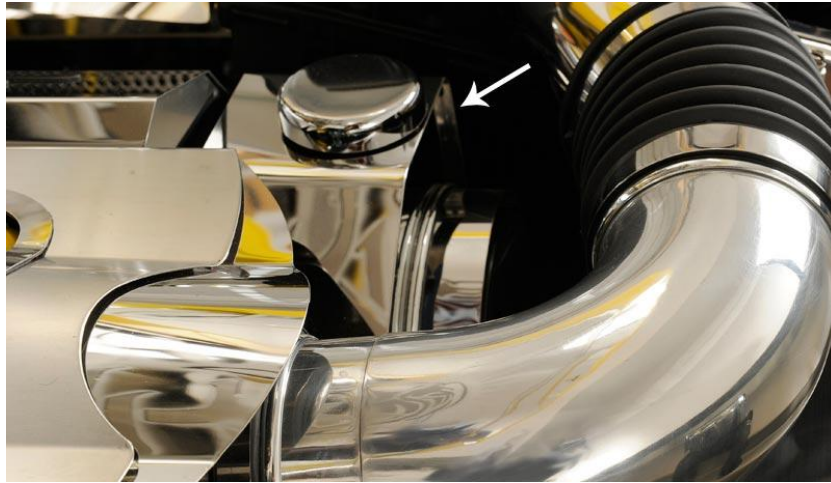

Parts Included:

- 1-Stainless Cover
- 1-Decorative Cap Cover
- 1-Adhesive Promoter Pack

Introduction: This new and unique all stainless cover is the only available cover for the 2010 to current 8 cylinder or SS model engines power steering reservoir and pump. It is designed to be used **WITHOUT** the factory engine shroud for applications such as super chargers and other engine modifications requiring the removal of the V8 engine shroud. This cover is **NOT** designed to fit V6.

Liner Information: Your new accessories will come to you with a protective surface liner. Leave this liner in place until the installation is complete to prevent finger prints and or possible scratches during installation.

1. Once you have permanently removed the engine shroud you will notice the power steering pump. Your new cover is designed to fit directly over the pump by removing the factory power steering pump cap then set the new cover in place and then reinstall the factory cap. This is the only mechanism required to hold your new cover in position. Remove the protective liner.
2. Thoroughly scrub clean the top surface of the factory cap with alcohol to remove any road grime and dirt. Then swipe the cap with the adhesive promoter provided. Then simply remove the Velcro cookie under the decorative cap cover supplied with your kit and peel the release liner from the cookie and then press it to the factory cap. Then simply set the decorative cap in place to finish the installation.

American Car Craft LLC
18924 Sakera Rd Hudson, FL. 34667
Ph 727.861.1500 Fax 727.861.1520
www.americancarcraft.com