




AMERICAN CAR CRAFT INSTRUCTIONS

2008-2011 Challenger SRT 8 6.1L Perforated Plenum Cover Part #153026

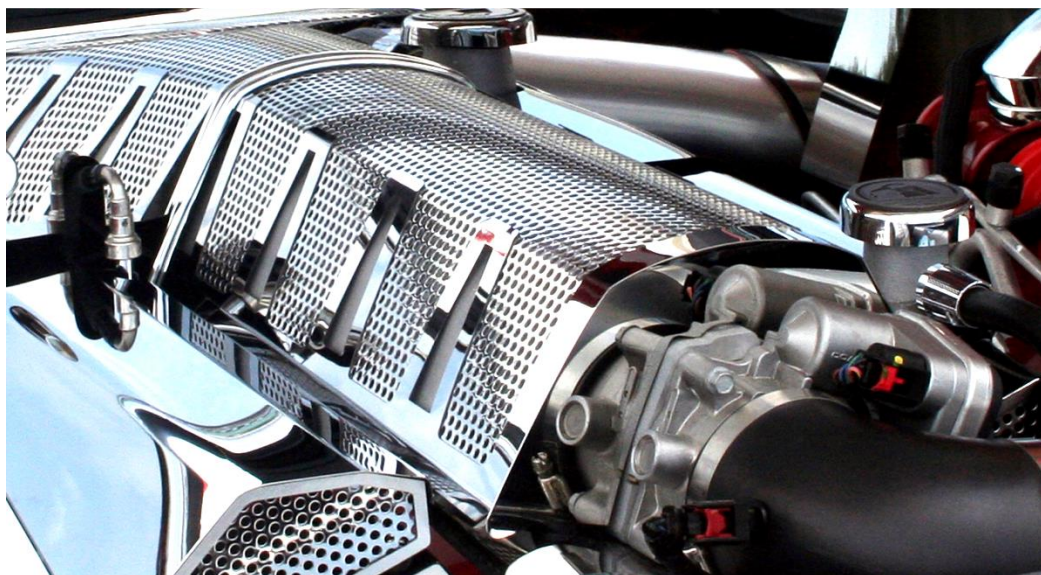

PARTS INCLUDED:

1-Stainless Perforated Plenum Cover

Liner Information: Your new accessories will come to you with a protective surface liner. Leave this liner in place until the installation is complete to prevent finger prints and or possible scratches during installation.

1. Your new cover has been designed to simply place securely directly on top of the factory SRT8 plenum. It has been designed to utilize all of the valleys and forms of the factory plenum to hold it secure from shifting in any direction and or vibrations. Before you begin to set this cover in place take a moment to lift off the protective liner from the lower edges of the cover as this will be very difficult to achieve once the new cover is in place.
2. Now that you have removed some of the liner set it directly onto the plenum. Because of the angled front you will need to **force** the front end of the covers angled shape warping the entire shape of the cover slightly to allow it to adapt to the shape of the factory plenum. Once you have passed the front area the cover will reform itself and allow you to set it into the factory cast plenum. It is the set tension of the cover that will allow it to remain in place nice and secure. You will notice that the covers lower edges will match the plenums valleys and shape providing a nice and stable final position providing a beautiful high tech look to what otherwise is a kind of bulky and odd looking engine plenum.

Thank you and enjoy your purchase!

If any questions occur during installation please contact

AMERICAN CAR CRAFT

18924 SAKERA ROAD-HUDSON FLORIDA 34667

Phone # 727-861-1500 Fax # 727-861-1520

www.americancarcraft.com