




**AMERICAN CAR CRAFT INSTRUCTIONS**  
**2005-2009 Mustang Rear Tag Frame**  
**Part #272016**

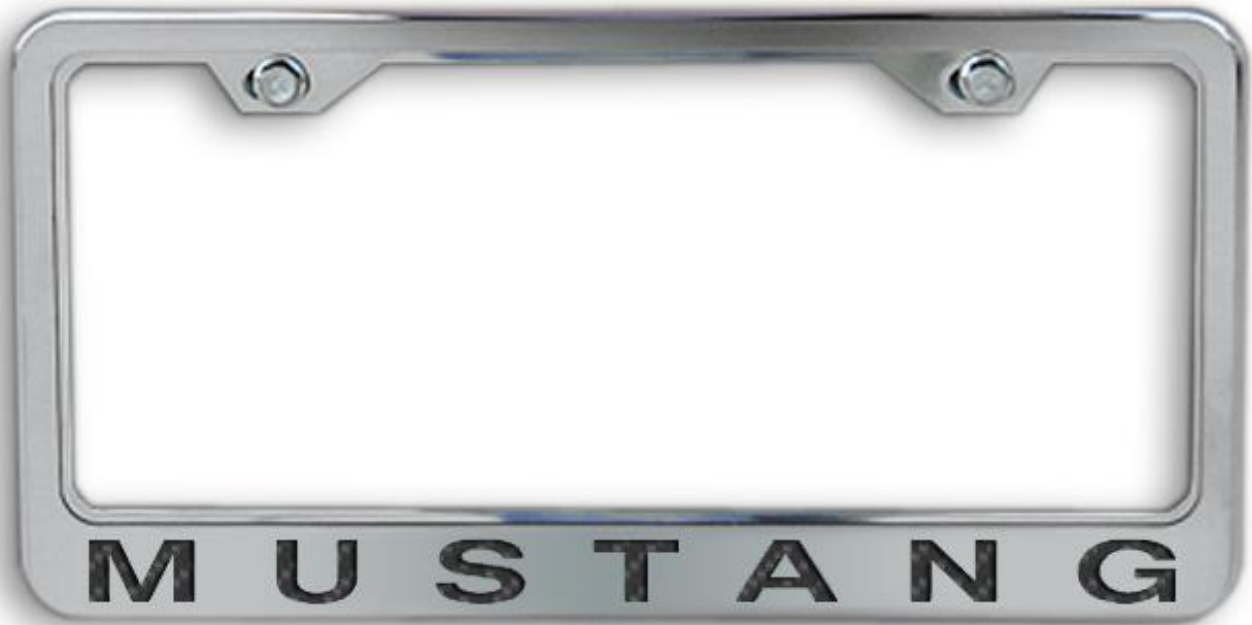

**PARTS INCLUDED:**

- 1-Chrome/Stainless/Carbon Fiber Tag Frame
- 2-6MM Bolts
- 2-124NC 10mm Chrome Screw Covers

1. Remove screws from stock license frame.
2. Install new Tag Frame and install new hardware.
3. Snap Chrome Screw Covers over screw head.

**If any questions occur during installation please contact American Car Craft at  
727-861-1500**

**Thank you and enjoy your purchase!**

**AMERICAN CAR CRAFT**  
**18924 SAKERA ROAD-HUDSON FLORIDA 34667**  
**Phone # 727-861-1500 Fax # 727-861-1520**  
**[www.americancarcraft.com](http://www.americancarcraft.com)**