
2005-2009



AMERICAN CAR CRAFT INSTRUCTIONS

05-09 Mustang BCM Cover

Part #273004 Patent Pending

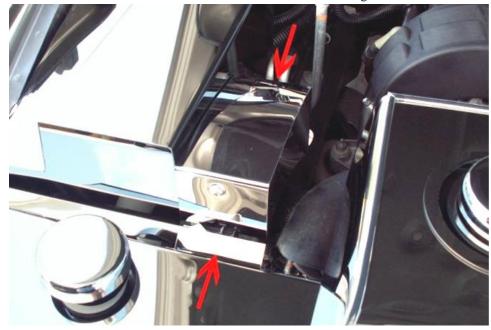

PARTS INCLUDED:

- 1-Stainless BCM Cover
- 2-Stainless Allen Bolts 6mm
- 2-Stainless Washers

Your new cover comes to you with a protective liner. Do not remove liner until prompted by instructions.

- 1. Remove the factor bolts in the front and in the back of the BCM unit. **NOTE:** These factory bolts will not be reused.
- 2. Place the new cover over the BCM and line up the two holes you just exposed. Remove the protective liner then bolt the new cover in place using the two stainless replacement Allen bolts and washers provided.

Thank you and enjoy your purchase!

If any questions occur during installation, please contact
AMERICAN CAR CRAFT
18924 SAKERA ROAD-HUDSON FLORIDA 34667
Phone # 727-861-1500 Fax # 727-861-1520

www.americancarcraft.com