




## AMERICAN CAR CRAFT INSTRUCTIONS

---

### 2011-2012 MUSTANG FENDER TOP CAPS 2pc

#### PART #273033

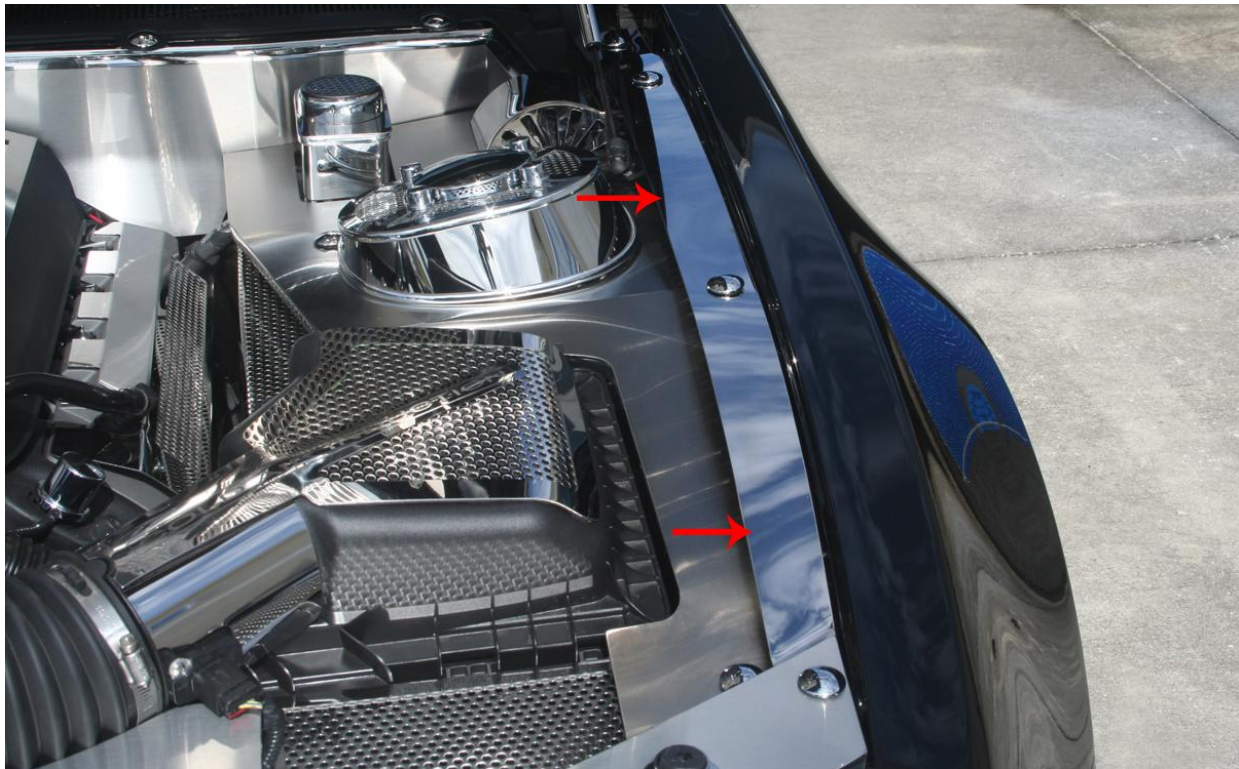

#### **Parts Included:**

- 2-Fender Caps
- 8-ACC Threaded Flange Type Fender Bolts
- 8-1/2" 6/32 Stainless Truss Head Screws
- 4-Thick Small Washers
- 8-1" Decorative Chrome Caps w/Velcro Donuts

**Introduction:** This hot new product will be the finishing touch to your new Mustang. It's a simple to install accessory that will make a huge difference to your new engine bay.

**Liner Information:** Your new accessories will come to you with a protective surface liner. Leave this liner in place until the installation is complete to prevent finger prints and or possible scratches during installation.

1. The first step will be to remove all of the factory fender bolts and replace them with the ACC threaded flange type fender bolts. Be careful not to over tighten these bolts as they still hollow at this point and can snap. Just snug will work perfect. These will serve as the mounting perches for your new fender

caps. You will notice that there is one bolt towards the center area that sort of sits into a recess. You have been provided with two thick small washers, for each side, that has been provided to be placed under this one bolt location. This will allow that bolt to sit a little higher when tight allowing the new fender cap to run down the fender nice and smooth without any dips in that area.

2. With all four bolts in place on both sides of your engine bay you can now place the fender caps in place and align the holes. Loosely set the ½' 6/32 stainless truss head screws provided into each of the four holes and into each bolt head. Then tighten down the screws.
3. You have been provided with eight 1" decorative chrome screw caps that each contain a mounting Velcro donut. Peel the protective liner from the fender caps and then detach the Velcro donut from each of the caps. Peel the release liner from the back of the donut and then place that donut around each of the screw heads. Then simply place the decorative cover over the screws to finish the installation.
4. If you fender caps are the lighted version. Simply route each length of wire emanating from the ends of the two caps over to the battery area. These will allow you to connect the led lighting to any twelve volt source you create such as a mercury switch/ toggle/ remote etc.

**If any questions occur during installation please call American Car Craft at 727-861-1500.**

**Thank you for your purchase!**

**AMERICAN CAR CRAFT  
18924 SAKERA ROAD-HUDSON FLORIDA 34667  
Phone # 727-861-1500 Fax # 727-861-1520  
[www.americancarcraft.com](http://www.americancarcraft.com)**