




## AMERICAN CAR CRAFT INSTRUCTIONS

---

### 2011-2013 Mustang K&N Intake Box Cover /Polished Perforated Part #273048

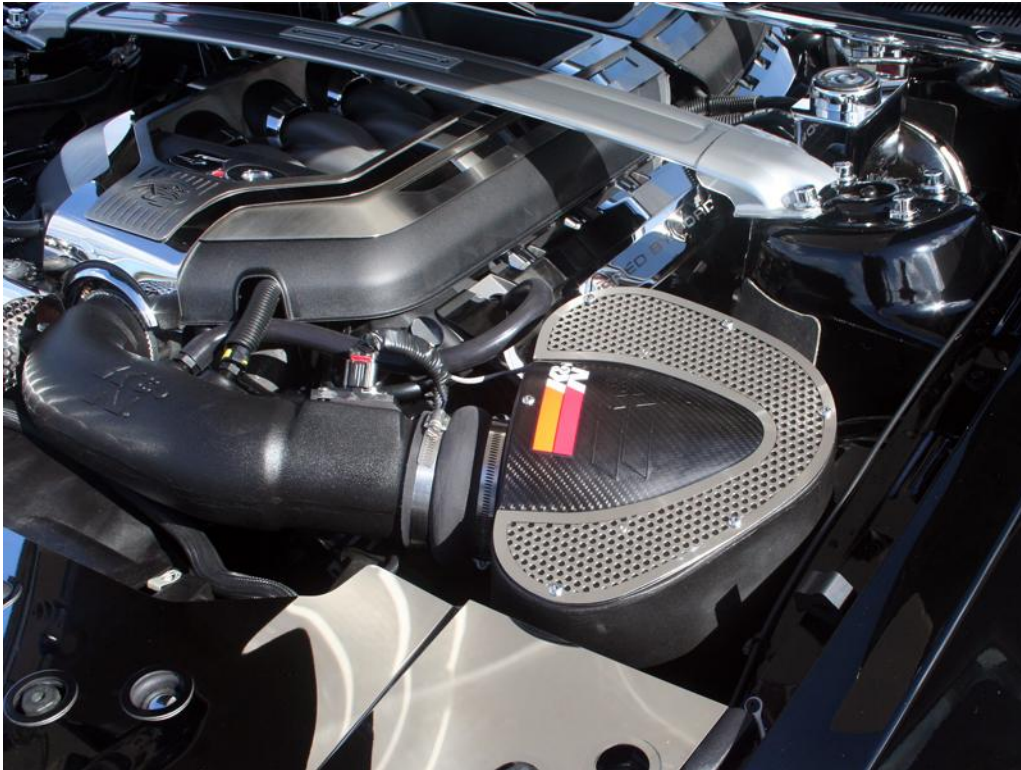


#### **INCLUDES:**

- 1-PERFORATED INTAKE COVER
- 2-#6 FLAT HEAD SCREWS

**Liner info:** Your new accessories will come to you with a protective surface liner. Leave this liner in place until the installation is complete to prevent finger prints and or possible scratches during installation. This liner is required to remain on the part until you are instructed to remove it.

1. Remove the K&N Intake Cover.
2. You will need to remove the (5) outer screws. These will be re-used when installing the new cover to the top of the K&N intake cover.
3. Set the new stainless top plate on the K&N cover and install the (2) screws in the inner holes of the new top plate. It is not necessary to pre-drill holes for the inner (2) screws. (see example 1)

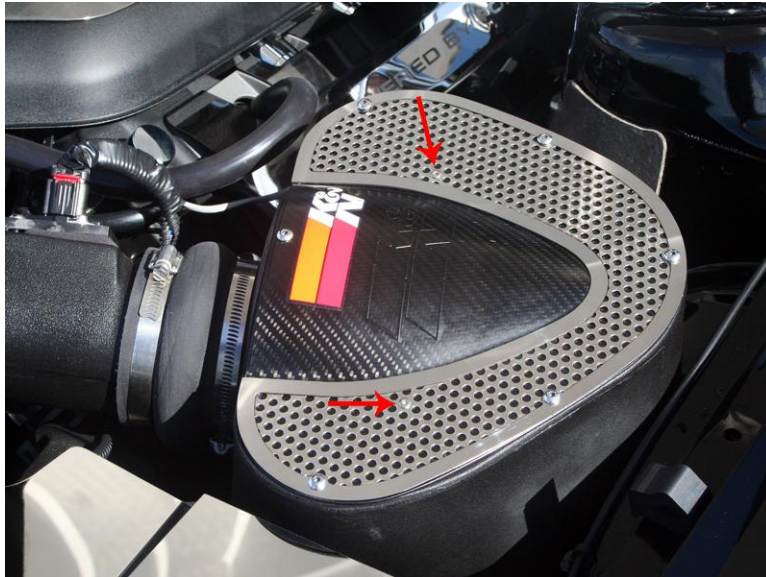

(image-1)

4. Install the intake cover and (5) screws which you removed earlier.

**If any questions or problems occur during installation, please contact American Car Craft at 727-861-1500.**

**Thank You and Enjoy Your Purchase!**

**AMERICAN CAR CRAFT  
18924 SAKERA RD HUDSON FL 34667  
Phone: 727 861-1500 Fax: 727 861-1520  
[www.americancarcraft.com](http://www.americancarcraft.com)**