




AMERICAN CAR CRAFT INSTRUCTIONS

Part # 713008

PT Cruiser Upper Hood Cap

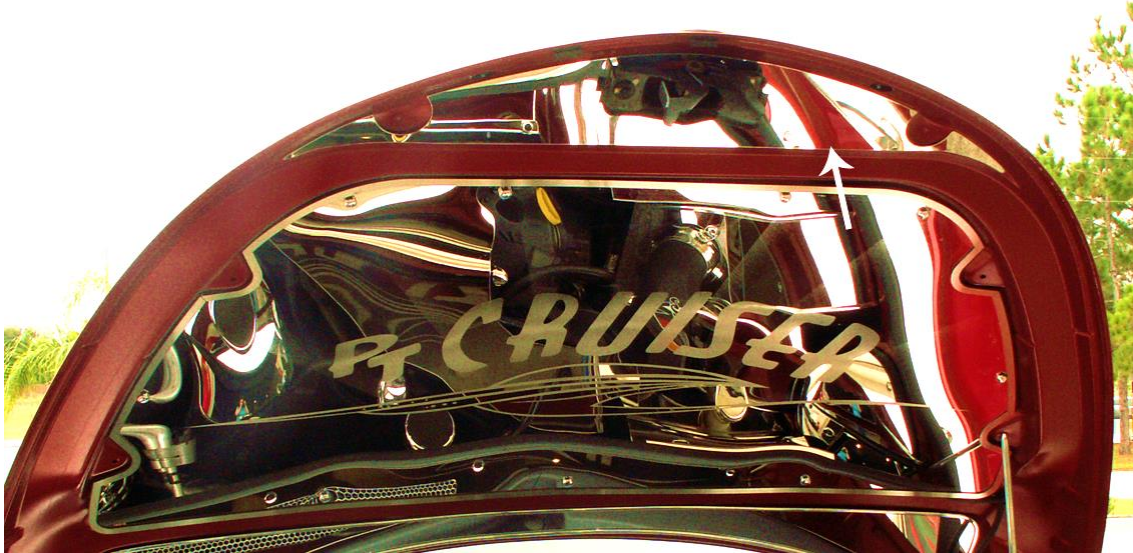

PARTS INCLUDED:

1-Upper Hood Cap

Your cover comes to you with a protective liner. Do not remove liner until step 4.

1. Temporarily remove the hood catch bar.
2. Clean the area to be covered with alcohol to remove road dirt and grime.
3. Smear a thin layer of clear 100% silicone to the underside of the new hood cap. Apply this silicone to the outer edges.
4. Remove a portion of the protective liner from the holes in the cap and place it in position. Reinstall the hood catch bar and bolts and tighten. Remove the remaining liner. Be careful not to pull the liner in such a way as to bend the cap off the hood as this will damage the part and force you to start over.

**If any questions occur during installation please contact American Car Craft at
727-861-1500**

Thank you and enjoy your purchase!

**AMERICAN CAR CRAFT
18924 SAKERA ROAD-HUDSON FLORIDA 34667
Phone # 727-861-1500 Fax # 727-861-1520
www.americancarcraft.com**